

How to configure bandwidth quota on your firewall



How to configure bandwidth quota on your firewall

This document will guide you through the steps to configure bandwidth quota on your firewall

To configure bandwidth quota, go to Browsing -> Quota -> Bandwidth Quota

The following screen will appear. This screen shows the summary of the Bandwidth Quota on your firewall. You can add, edit or delete bandwidth quota rules using this screen.

Users	Allowed Limit			C-1-1-1-	- 1
	Upload	Download	Total	Schedule	Task
guest			50.00 KB	Daily	夺奋

• To add Bandwidth Quota click on $igodoldsymbol{\Theta}$ button.

- To modify Bandwidth Quota click on 🔹 button.
- To delete Bandwidth Quota click on to button.

NOTE: User will get bandwidth quota usage data details on his userSense authentication portal page

To add Bandwidth Quota, click on \bigoplus icon.

The following screen will appear:

Add Bandwidth Quota			
Users/Groups	testgroup Select to add : Ousers/Groups		
Group Type	○ Inclusive		
Allowed Limit	● Total O Custom		
	Total: Bytes V		
Alert If Limit Reached			
Schedule	Daily		
Save Cancel			

To add bandwidth quota, the following information is needed:

• Users/Groups: Selecting the Users or UserGroups for whom the Bandwidth Quota needs to be applied. Add User/UserGroups by clicking the Users/Groups option. If you want the Bandwidth Quota to be applicable to All users, select "All" option.

Select User & User Groups				
Available Users	Available User Groups			
abcxyz arjun guest1 guest2	testgroup			
\odot				
Selected Users & User Group List :				
	~			
	Submit			

NOTE: If you click on the User/Groups text box, it would show the User/Groups to be selected.

• **Group Type:** When you select Users/Groups, this field appears. There are two options you can choose from- Inclusive and Exclusive.

In Inclusive, all the users/groups are collectively assigned a specified bandwidth quota to be used. For example, if 1 GB has been allocated, all the users in the group will have to utilize that 1GB collectively

In Exclusive, each user of the group will individually be assigned the specified quota. For example, if 1GB is assigned, all the users in the group, each, will individually get 1GB of data to utilize.

• Allowed limit: This field specifies the allowed limit or bandwidth quota that will be allocated to selected Users/Groups. you can specify the limit in two ways- Total or Custom.

if you select Total, total bandwidth (Upload/Download) will be assigned in KB, MB or GB. On reaching any one of the exceeding limits for either Upload or Download or total of both, the user's exceeded limit for upload/ download will be stopped.

if you select Custom, the following options will appear where you can customize the upload and download bandwidth in bytes, KB, MB, GB. You can specify custom upload or download limit in bytes, KB, MB, or GB. On reaching limits for either Upload or Download, the user's exceeded limit for upload/ download will be stopped respectively.

Add Bandwidth Quota				
Users/Groups	All Select to add : OUSers/Groups All			
Allowed Limit	○ Total			
	Upload: Bytes v Download: Bytes v			
Alert If Limit Reached				
Schedule	Daily ~			
	Save Cancel			

• Alert if limit reached: Check this field if you want to enable email alerts when user reaches the specified limit.

• **Schedule:** You can specify the schedule after which the quota will be auto reset. You can schedule it on a daily, weekly, monthly or yearly basis.